

Download Coats 4050a Tire Changer Manual

Page 1 © 4050A Tire Changer For servicing single piece automotive and most light truck tire/wheel assemblies
Safety Instructions Operating Instructions Installation Instructions Maintenance Instructions READ these instructions before placing unit in service KEEP these and other materials delivered with the unit in a binder near the machine for ease of reference by supervisors and operators ...4050a, Tire changer • Read online or download PDF • COATS 4050A Tire Changer User Manual. Manuals Directory ManualsDir.com - online owner manuals library. Search. Directory. Brands. COATS manuals. Equipment. 4050A Tire Changer. Manual COATS 4050A Tire Changer User Manual ... COATS ® and BADA ® ...6 • COATS 4050A Tire Changer Parts Identification Read and follow installation and maintenance instructions on this page and in the unit's Operation Instructions manual to help insure proper, safe operation and to obtain the best possible service life from the unit. Correct installation, regular inspections, and proper maintenance are Manual Release Valve —Allows for manual release of air pressure from the tire. ... COATS 4050A Tire Changer • 3! CAUTION Narrow Side Long Side Drop Center. 7. Once the tire beads have been loosened from the bead seat of the wheel, lubricate the beads liberally with rubber lubricant (fig.5).